


Vertical File Cabinet Installation Instructions

- 1: As shown, with Q fixed at C on the N
- 2: The B, C mounting onto A, with P fixed
- 3: D as shown in the attached to B, C
- 4: The O,E as shown mounted to the cabinet, With P fixed E



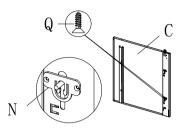


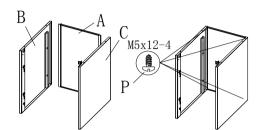









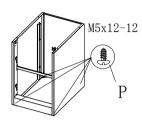


a:







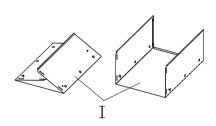


5: F to cabinet installation, with P fixed



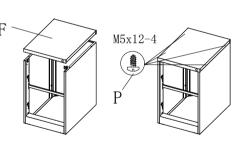


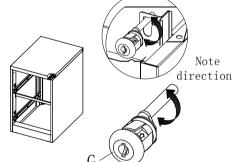


c:As shown in the J
mounted to the drawer

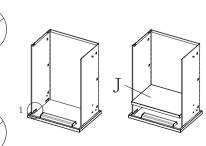


d: Installation shown in Figure K; M to install I, and with R fixed

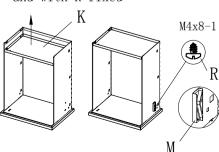

e: When installing refer to the figure pulled sled \boldsymbol{L}

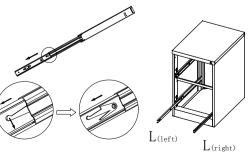

7: Packed onto the drawer on the cabinet (installed)





Part ID	Description	Illustration	Qty	Part ID	Description	Illustration	Qty	Part ID	Description	Illustration	Qty
A	Back		1	Н	Drawer panel		2	0	Rod		1
В	Left side plate		1	Ι	Drawer Doo Wai		2	Р	Screws M5*12		20
С	Right side plate		1	Ј	Front Closed		2	Q	Screws M4*16		2
D	Lower frame	Topag	1	K	After plugging		2	R	Screws M4*8		2
Е	Connecting piece		4	L	Track	Left Right	2	S			
F	Тор		1	M	Interlock block		2	Т			
G	Lock		1	N	Interlock snap		1	U			