










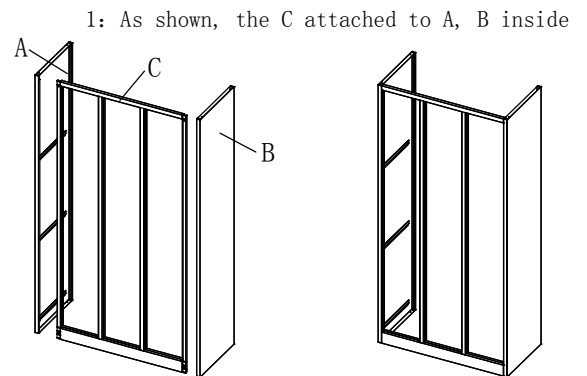
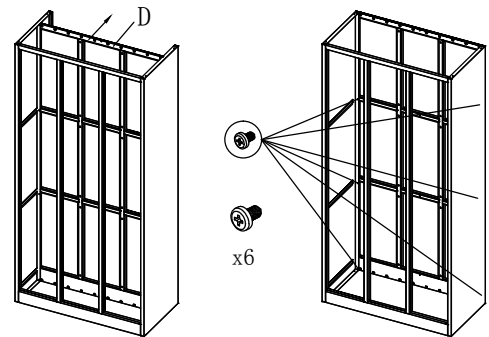


Part ID	Description	Illustration	Qty
A	Left Side Panel		1
B	Right Side Panel		1
C	Front Frame		1
D	Rear Wall		1
E	Top		1
F	Bottom		1
G	Big Shelf		1
H	Middle side		2
I	Middle side		2
J	Middle side		2
K	Door		9


## BZ-C-C9 Installation Instructions




2: Screw the A and B to D




3: Screw the E, F mounted to the cabinet

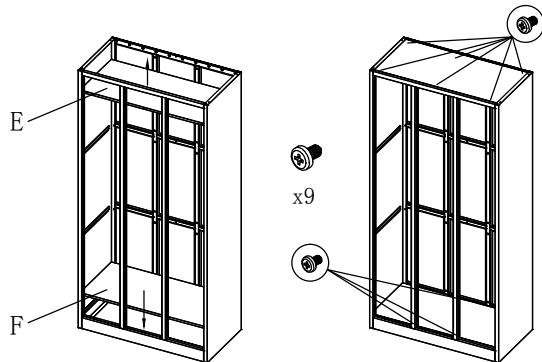

4: Installing the G to the cabinet, pay attention to the screws installed

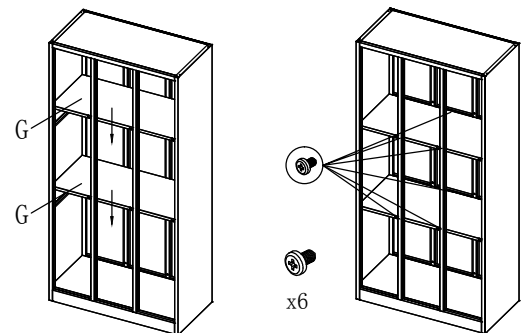

5: As shown, the mounting H, I, J

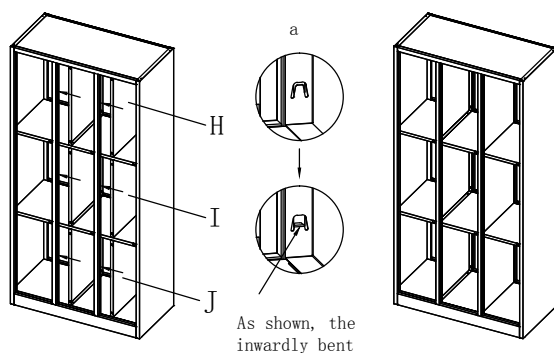

6: Finally, the K, followed by the installation from the bottom up

